




**STEP 1:** Loosen set screw by turning counter-clockwise, using the allen wrench located inside the handle.



**STEP 2:** Remove head of JackTight from handle.



**STEP 3:** Remove spool from rod.

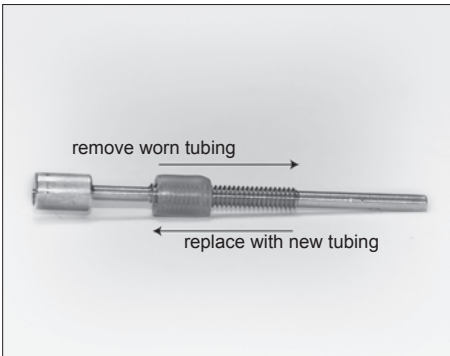


**STEP 4:** Replace rubber tubing with new tubing found in handle by sliding worn tube downward to remove and sliding new tube upward to replace.



**STEP 5:** Reassemble JackTight.



**WARNING:** Do not try to loosen set screw at the top of JackTight. This will damage your tool.

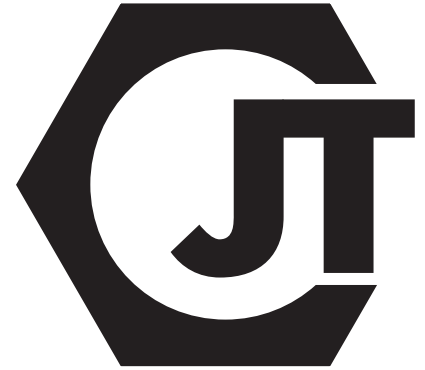

**JACKTIGHT 2.0**